JV5-320S 巻取装置/操出装置の使い方

このたびは、JV5-320S をお買い上げいただき、誠にありがとうございます。

本紙は、JV5-320S でお使いになる色々な種類のメディアについて、安定した巻き取りを行うための説明書 です。

本紙をよくお読みいただき、それぞれのメディアの特性に合った設定で巻取 / 操出装置をお使いください。

巻取装置、操出装置の機能

JV5-320Sの巻取装置、繰出装置には、次の2つの機能があります。



2 巻取 / 操出テンションバーの重量調整用のカウンターウェイト(ウェイトの調整枚数は 0~17枚)



本機では以下のようなメディアを使用できますが、上の2つの機能を正しく設定することで、より安定した メディアの搬送(巻き取り)が可能になります。

■専用ソルベントインク: FF、ターポリン、メッシュターポリン、塩ビ ■専用水性インク: 昇華転写紙

メディアの種類と設定内容

ここでは一般的な設定内容を記載しています。伸縮が大きいメディアの場合は、巻取テンションバー動作位 置を[タカイ]に設定してから、カウンターウェイト で設定してください。

メディアの種類	1) 巻取テンションバー動作位置 [タカイ] [ヒクイ] ¹	2) カウンターウェイト設定 ²	備考
FF	任意に設定	任意に設定	
ターポリン <i>।</i> メッシュターポリン	[タカイ]で設定 理由: インクの侵食を受けやすいメディアの 場合、膨張等を起こし、メディアの搬 送や巻き取りに影響が出る可能性があ るため、テンションバーでの折り返し 角度の緩い本設定を行ないます。	10~17枚で設定 理由: テンションバー重量が重い場合に膨張 したメディアにより、搬送時や巻き取 り時に重量張力によりシワが発生する 可能性があるため、ウエイトで軽量化 し調整します。	
塩ビ	任意に設定	任意に設定	
昇華転写紙 ※コックリングの状態を 見て、アフターヒー ターの温度設定をして ください。	[ヒクイ] で設定 理由: インクにより発生するコックリングを 補正するため、巻き取りまでの搬送距 離が必要。		プリヒーターとプリ ントヒーターの温度 設定は OFF でお使 いください。

1.[タカイ][ヒクイ]の設定方法

[マシンセッテイ]-[クリダシ&マキトリ]内のメニューから設定します。

->[ソウチセンタク] (操出 / 巻取機能): ON/OFF を選択 -> [テンションバーイチ](巻取テンションバーの動作位置):タカイ/ヒクイを選択

2. カウンターウエイトのセット方法 ※図は巻取側の場合です。操出側も同様です。 ※ テンションバーは、ロック位置で固定しておいてください。



添付のネジ (B4 x 120, 4 本) で固定します。 操出側も同様にセットします。



JV5-320S How to use Take-up / Feeding device

Thank you for purchasing JV5-320S.

This leaflet describes the settings for the various media used for JV5-320S to be taken up stably. Read this leaflet carefully, and use the take-up / feeding device with the proper settings for each media.

Functions of Take-up / Feeding device

The take-up device and the feeding device of JV5-320S have the following 2 functions.

1 (Take-up device only) The active position of the take-up tension bar is selectable



2 The counter weight for adjusting the weight of the take-up / feeding tension bar is added (Adjust with 0 to 17 pieces of the counter weight)



The following media are available for this machine. With the settings above, feeding (take-up) of these media becomes more stable.

- Dedicated solvent ink:
- FF, Tarpaulin, Mesh Tarpaulin, PVC
- Dedicated water-based ink:
- Sublimation transfer paper

Type of media and settings

The followings are the general settings. For stretchy media, set the active position of the take-up tension bar to [HIGH], then adjust with the counter weight.

Media Type	1) Active position of the take-up tension-bar [HIGH] [LOW] ¹	2) Counter weight setting ²	Note
FF	Set arbitrarily	Set arbitrarily	
Tarpaulin / Mesh Tarpaulin		Set between 10 and 17 Reason: The media expanded by tension-bar weight may get wrinkled while feeding or taking-up the media for the tension by the tension-bar weight. To avoid the wrinkles, trim weight with the counter weight.	
PVC	Set arbitrarily	Set arbitrarily	
	Set [LOW] Reason: To fix cockling made by ink, it is neces- sary to secure the feeding length to take-up device.	* Cockling status differs by the media	Set the temperature of Pre-heater and Print heater OFF.

1.How to set [HIGH][LOW]

Set from the menu in [MACHINE SETUP] - [Feeding / TakeUP].

-> [UNIT SELECT] (Feeding / Take-up function) : Select ON/OFF

-> [TensionBar POS.] (Active position of the take-up tension-bar) : Select HIGH / LOW

2.How to set the counter weight

- * The figure below is the take-up side. The feeding side is the same.
- * Fix the tension-bar with locks.



Set the pieces of counter weight as needed (0 to 17), and fix the provided 4 screws (B4 x 120) Set the feeding side in the same way.

