


フェルトマット施工手順書

フェルトマットを貼り替える時は、以下の手順で作業してください。



- フェルトマットは、直径約 300mm に巻かれ、段ボール箱に梱包された状態で、お客様に届けられます。
適応するサプライ：SPC-0924 フェルトマット 2513、SPC-0925 フェルトマット追加テーブル用
- フェルトマットにはロール状に巻いた痕が付いています。平らになるまでマットを伸ばしてから使用してください。
- 付属の両面テープを、フェルトマットの裏面に、お客様ご自身で貼り付けていただく必要があります。フェルトマットの表裏は、平滑面（すべすべした面）が表、摩擦抵抗のある面（ざらざらした面）が裏面になります。

- (1) 新しいフェルトマットを平に広げ、巻き癖を取る。
 - 半日程度マットを広げて放置してください。
- (2) フェルトマットの裏面を上にして置き、付属の両面テープを図のように貼り付ける。
 - フェルトマットの 4 辺に両面テープを圧接しながら、貼り付けてください。

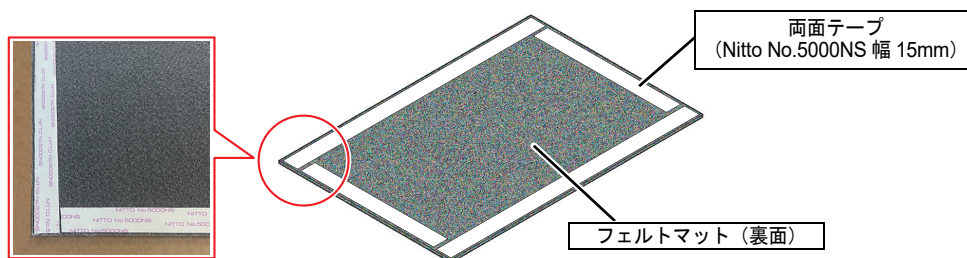

- (3) 本体テーブル上の古いフェルトマットを剥がし、新しいフェルトマットをテーブルに取り付ける。
 - テーブル上の古い両面テープを十分に取り除いてから、新しいマットを貼り付けてください。
 - フェルトマットの 4 辺を押さえ、マットがテーブルに十分接着したことを確認してください。
 - 使用済みのフェルトマットは破棄してください。


Felt Mat Installation Procedure

Follow the steps below when replacing the felt mat.



- The felt mat is rolled up with a diameter of approx. 300 mm and packaged in a cardboard box before delivery to the customer.
Applicable supplies: SPC-0924 Felt Mat 2513, SPC-0925 Felt Mat for Additional Table
- The felt mat has marks from being rolled up. Stretch the mat out until it is flat before use.
- The included double-sided tape must be applied to the back of the felt mat by the customer.
The smooth side (slick side) of the felt mat is the front, and the side with friction (rough side) is the back.

- (1) Spread out the new felt mat flat and remove any marks from rolling.
 - Leave the mat spread out for about half a day.
- (2) Place the felt mat with the friction side up and affix the supplied double-coated adhesive tape as shown.
 - Place the felt mat with the back side facing up and apply the included double-sided tape as shown in the figure.

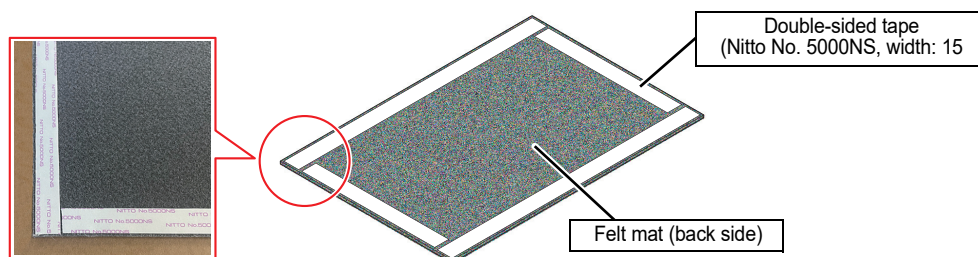

- (3) Remove the old felt mat on the main unit table and attach the new felt mat to the table.
 - Fully remove the old double-sided tape on the table before attaching the new mat.
 - Press down on the four sides of the felt mat and make sure the mat is fully adhered to the table.
 - Discard used felt mats.