

# メディアがプラテンに張り付いてしまう場合は


メディアがプラテンに張り付いてメディア送りが正常にできない場合、付属の NITOFロン®( ニトフロン ) をプラテンに貼ることで解消できます。

NITOFロン®( ニトフロン ) 貼り付けの際は、以下の物をご用意ください。

NITOFロン®( ニトフロン ) No.973UL-S.....付属品	ハサミ
アルコールまたは薄めた中性洗剤 ( 脱脂用 )	ベンコット ( 脱脂用 )


(1) 電源を OFF にする

(2) アンダーカバー L を開け、メンテナンスカバーを下げる

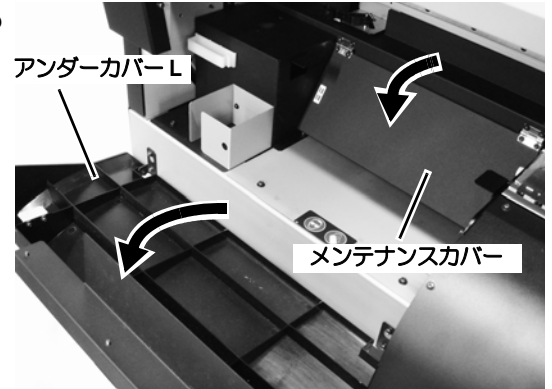


(3) つまみネジを外し、メディア押さえストッパを外す

(4) プラテン上のメディア押さえをスライドさせ、取り外す ( 左右 )

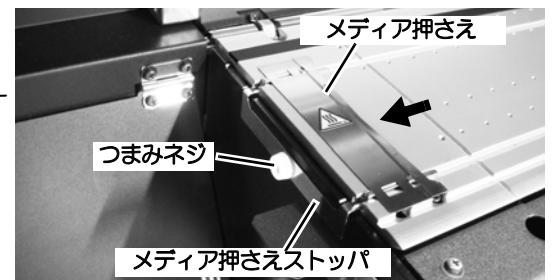



(5) アルコールまたは薄めた中性洗剤でしめらせたベンコットを固く絞り、プラテンを脱脂する

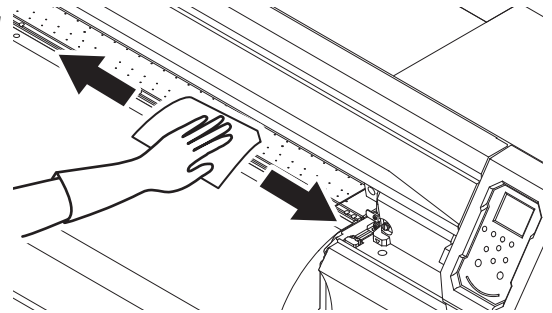

(6) NITOFロン®( ニトフロン ) をプラテンに貼る

プラテンの右端から左端まで、吸着穴に沿って 5 本貼り付けます。

**重要!** ・ 吸着穴をふさがないように貼り付けること。

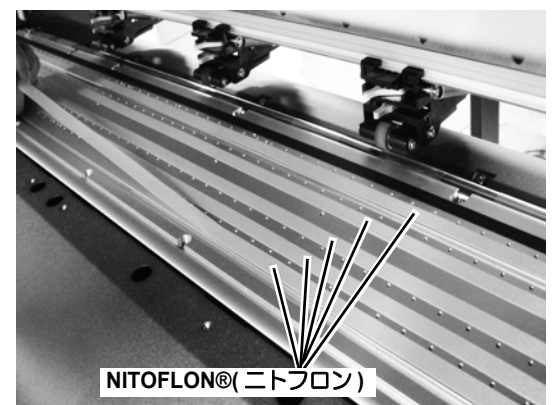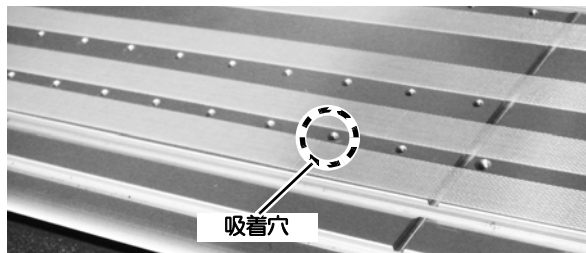

(7) メディア押さえを元に戻し、メディア押さえストッパを取り付ける

(8) アンダーカバー L、メンテナンスカバーを元に戻す


# If the media adheres to the platen

NITOFロン® is supplied with the product. If the media adheres to the platen and cannot be fed normally, solve the problem by sticking the NITOFロン® onto the platen. Follow the procedure below to do this. Prepare the following items for sticking the NITOFロン®.

NITOFロン® No.973UL-S .....	Accessory	Scissors
Alcohol or diluted neutral cleansing agent (for degreasing)		Bemcot (for degreasing)


(1) Turn the power off.

(2) Open the under cover L, and pull the maintenance cover down.

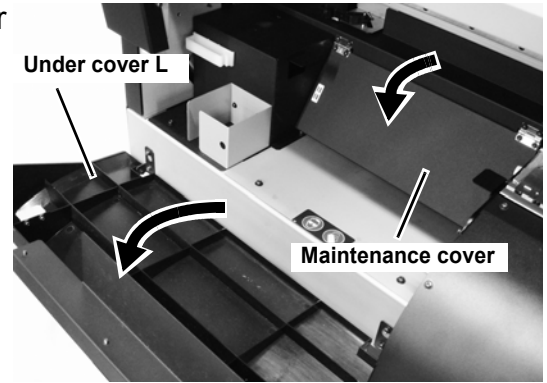


(3) Remove the thumbscrew, then remove the media press stopper.

(4) Remove the media presses on the platen (left and right), by sliding them.

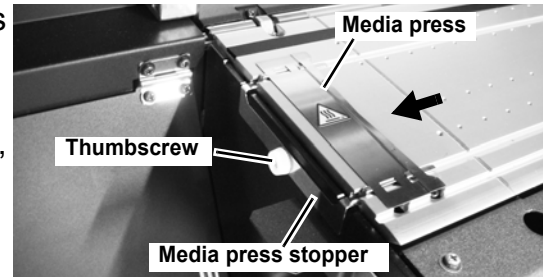

(5) Wet a Bemcot with the alcohol or diluted neutral cleansing agent, wring it out well, and use it to wipe the platen clean of grease.


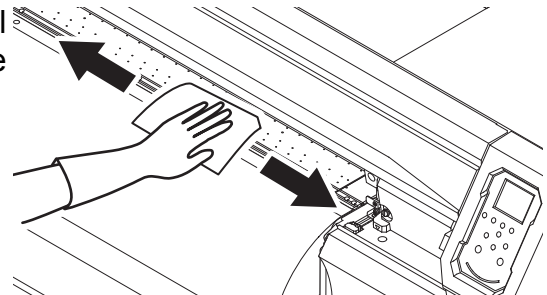


(6) Stick the NITOFロン® onto the platen.

Stick 5 strips of NITOFロン® on, aligned with the suction holes, from the platen's right edge to its left edge.

**Important!**

- Take care that the suction holes are not blocked by the NITOFロン® strips.

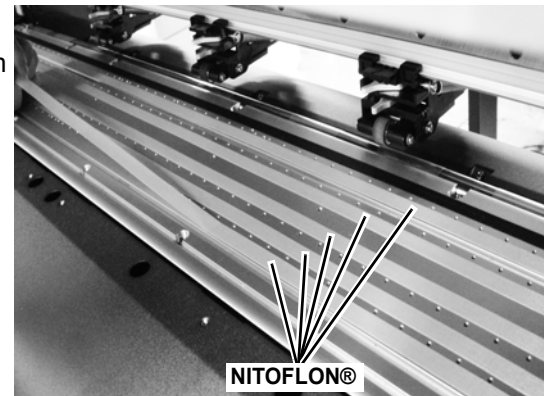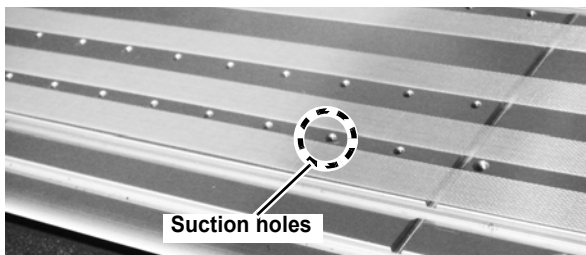

(7) Put the media presses back in their original places, and reinstall the media press stopper.

(8) Put the under cover L and maintenance cover back in their original places.